


RS232 Multimeter Shield

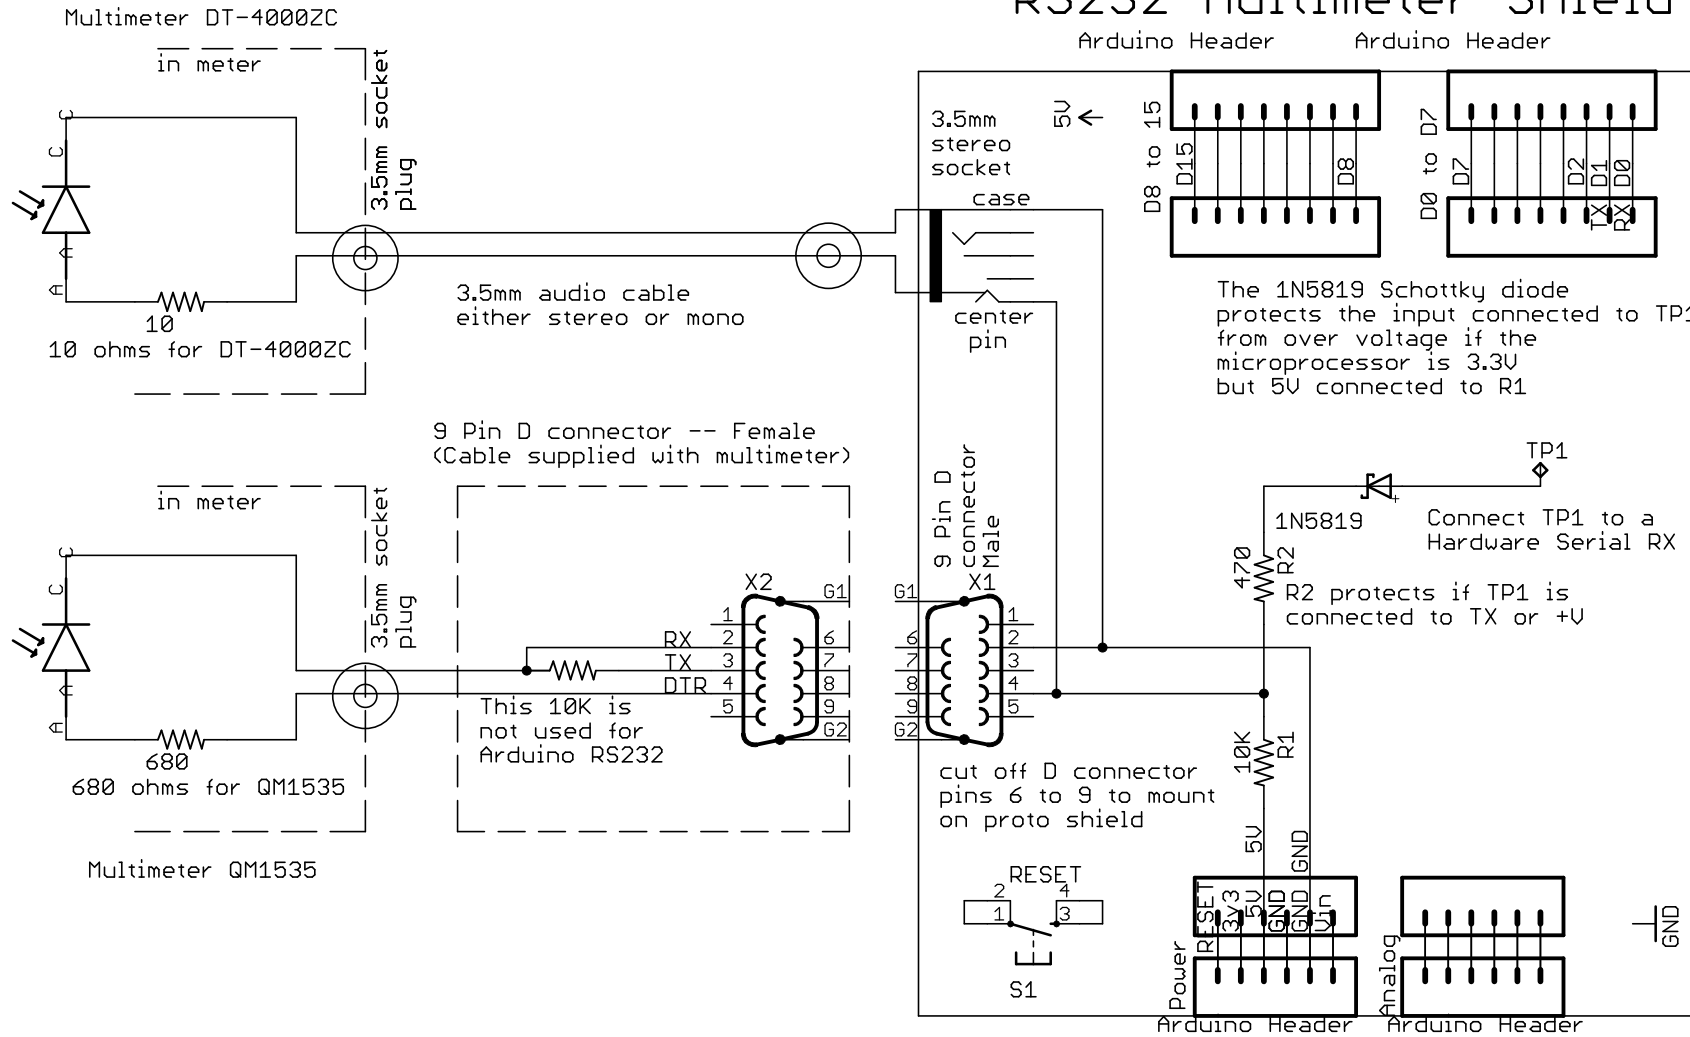

If your board only has 3.3V available, then connect R1 to the 3.3V pin. Other boards can use 5V or 3.3V because the 1N5819 protects the uC input connected to TP1 against over voltage.