


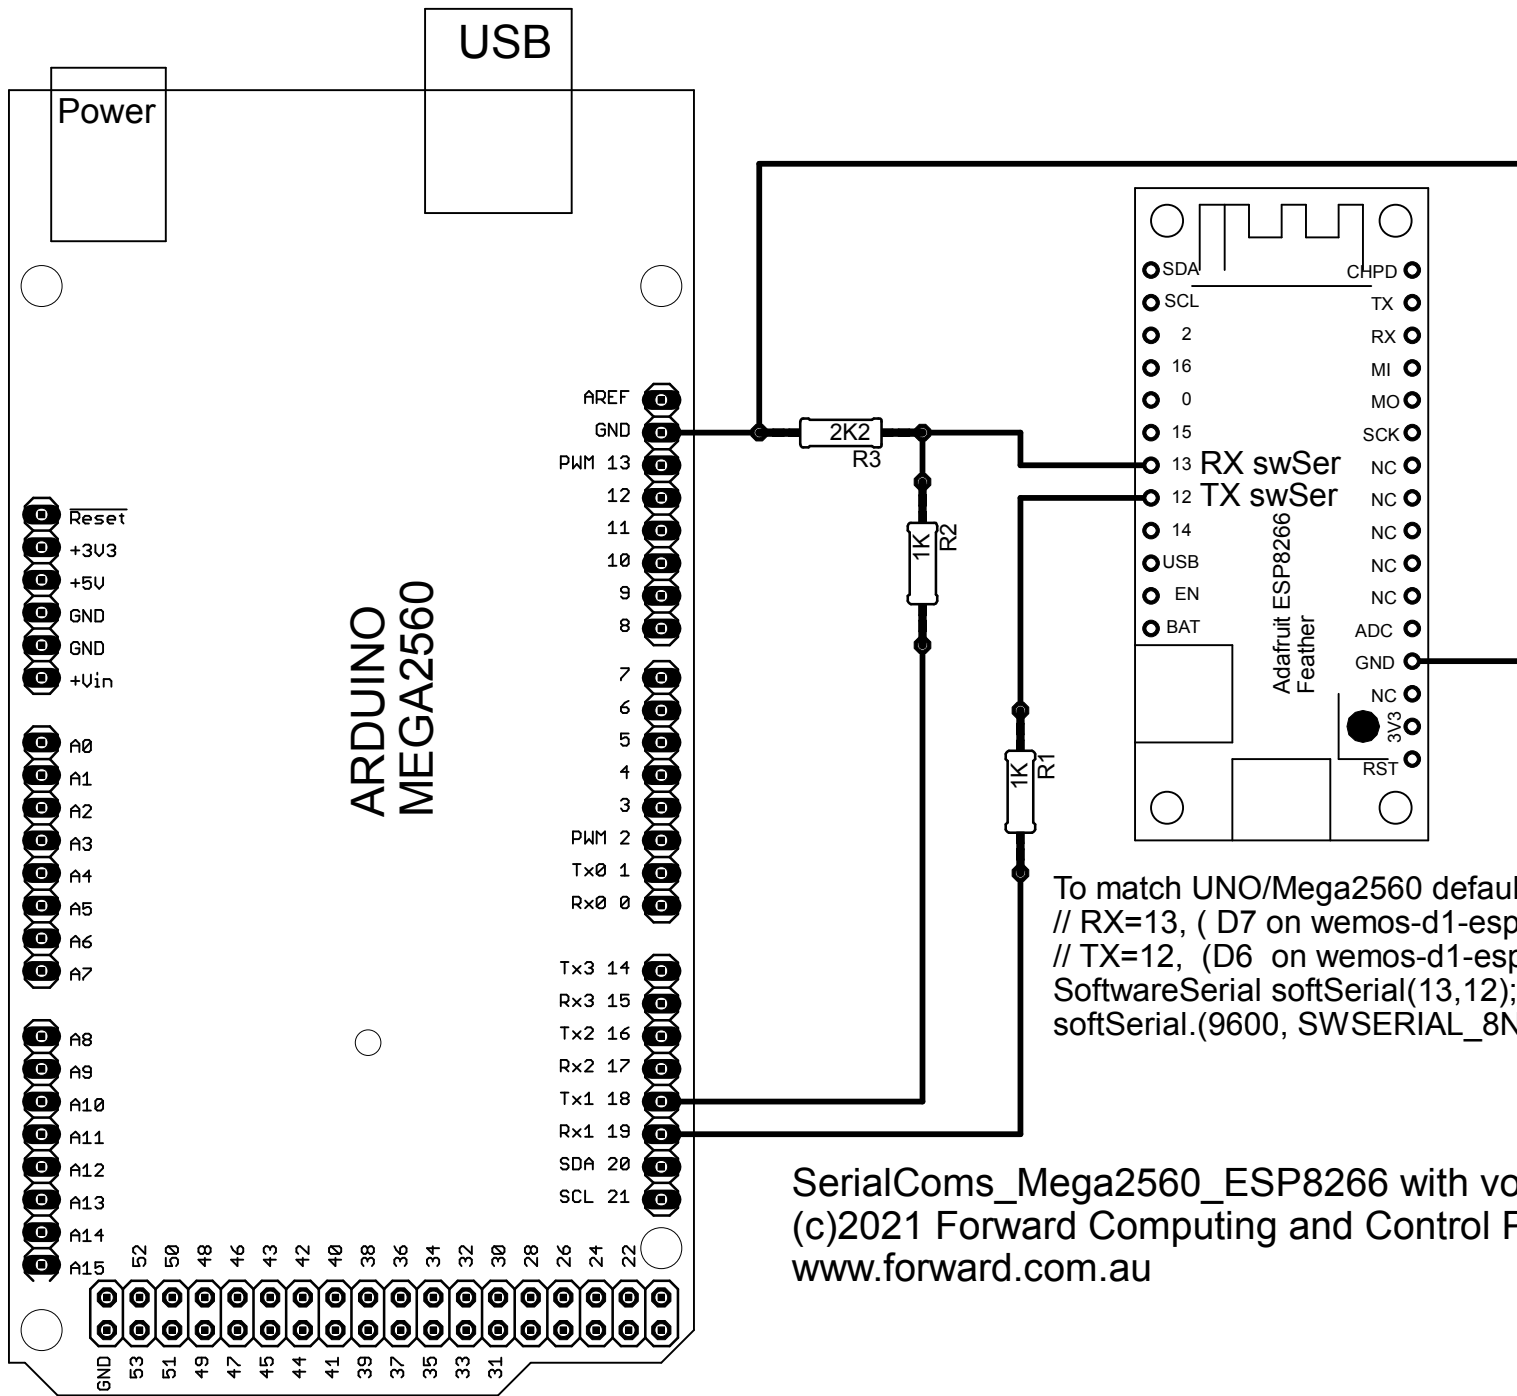

To match UNO/Mega2560 default serial settings use `SWSERIAL_8N1`;
 // RX=13, (D7 on wemos-d1-esp8266)
 // TX=12, (D6 on wemos-d1-esp8266)
 SoftwareSerial softSerial(13,12);
 softSerial.(9600, `SWSERIAL_8N1`, -1, -1, false, 256); // 256 byte RX buffer

SerialComs_Mega2560_ESP8266 with voltage divider
 (c)2021 Forward Computing and Control Pty Ltd
www.forward.com.au