

Generic nRF52832 bare module pins

The Serial, SPI and Wire pins can be changed with

```
Serial.setPins(rx_pin,tx_pin);
SPI.setPins(miso_pin,clk_pin,mosi_pin);
Wire.setPins(sda_pin,scl_pin);
```

before calling .begin()

