



Note Rx <-> Rx via voltage divider  
Tx <-> Tx via protection resistor

First clear the UNO with an empty sketch  
and then select Generic ESP8266 as the board

The UNO is just the USB to TTL converter

## UNO programmer for ESP-01

(c)2022 Forward Computing and Control Pty. Ltd. NSW Australia  
All rights reserved

